



Split single-phase and threephase inverter reversible air-water heat pumps with outdoor unit and separate hydronic module









Range of "split" inverter reversible air/water heat pumps, composed of an outdoor condensing unit and an indoor hydronic module; a single "pack" code identifies the complete system (hydronic module + condensing unit). There are 3 versions available with single-phase power supply (MAGIS PRO 12 V2, MAGIS PRO 14 V2, MAGIS PRO 16 V2), and 3 versions with three-phase power supply (MAGIS PRO 12 V2 T, MAGIS PRO 14 V2 T, MAGIS PRO 16 V2 T). The water circuit is fully protected against freezing because installed inside the home (in this case there is no need to add antifreeze); it is, therefore, particularly suitable for cold climate areas.

The MAGIS PRO V2 versions are ideal for conditioning rooms in central heating mode (maximum flow temperature 55°C) in cooling mode, and can produce DHW coupled with a separate storage tank unit.

Make the refrigerant connections between the hydronic module and the outdoor condensing unit coolant gas R410A).


At plant application level, the system can be combined to electric resistances/boiler; for the production of DHW, MAGIS PRO V2 is equipped with standard integrated motorised 3-way valve (connection to a storage tank).

The System manager is available as optional, to be used mainly when having to combine an integrative boiler: it is capable of identifying the most economical energy source at a given time and therefore choose the right appliance to activate.

The hydronic module of the MAGIS PRO V2 is approved for outdoor use in a partially protected area and can also be installed inside the CONTAINER for SUPER TRIO TOP or the DOMUS CONTAINER for SUPER TRIO TOP (in all solutions you can choose between 12, 14 or 16 kW power, all with single-phase or three-phase power supply).

MAGIS PRO V2 also meets the requirements of the ErP Directive (2009/125/EC) and ELD (2010/30/EC); there are a number of optional kits available, which allow it to be used in different plant applications.

In the foreseen cases, for interventions on the existing one, the whole MAGIS PRO 12-14-16 V2 range can benefit from the tax concessions in force and the new Conte Termico 2.0.

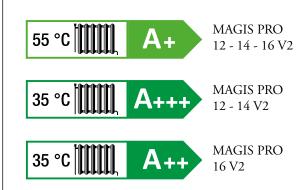



#### MAGIS PRO 12 - 14 - 16 V2 FEATURES (SINGLE-PHASE OR THREE-PHASE)

"Split" inverter reversible single-phase or three-phase air/water heat pumps, composed of an outdoor condensing unit and a wall-hung indoor hydronic module; a single code identifies the complete system consisting of the following main components:

1

- Outdoor unit (UE AUDAX PRO V2 / UE AUDAX PRO V2 T)
   which mainly includes rotary compressor, inverter electronics,
   throttle valve, 4-way valve for cycle inversion, finned exchange
   coil with outdoor air. The cooling circuit is already preloaded
   (R410A refrigerant) in the outdoor unit, equipped with the
   relative shut-off valves;
- Wall-hung hydronic module (UI MP AP), with a similar shape and appearance to a boiler, which includes the hydraulic circuit components for connection to the system, as well as the related management and communication electronics with the condensing unit, in particular it consists of:
- 72-plate water/R410A Heat exchanger unit,
- 10 litre system expansion vessel, water manifold, flow meter,
- Hydraulic unit with a high head and low power consumption circulator,
- 3-way motorised diverter valve (for coupling to separate storage tank),
- Transformer for managing the internal communication board with the outdoor unit.
- Hydraulically the module is set-up for connection to a heating/ cooling zone and for connection to the DHW storage tank; there are also the R410A connections for the outdoor unit;
- Within the hydronic module you can place the integrative electric resistance kit for 3 kW system (optional, directly controlled by the electronics of the hydraulic module), in cases where a gas boiler is not combined; only one or two integrative electrical resistances can be installed (3 kW or 6 kW);
- Compared with block heat pumps, the water circuit is fully protected against freezing because it can be installed inside the home (important in cold zones);
- Max. flow water temperature 55 °C (for central heating systems with low and medium temperatures);
- The electronics of MAGIS PRO V2 is designed to directly manage 3 zones (one direct and two mixed), for the third mixed zone it is necessary to provide the configurable relay interface kit code 3.015350) for both central heating and cooling operation; in this case MAGIS PRO V2 can be connected to remote zone panels via Bus connections (up to 3 can be provided), or it can be connected with simple on/off contacts (e.g. CHRONO 7) to control the room temperature of the 3 zones. 3 humidistats or 3 Modbus temperature and humidity sensors can be connected to control humidity;
- Possibility to set 3 climatic heating curves and 3 climatic cooling curves (for the 3 zones), on the electronics of the hydronic module without having to provide the System manager; if the condensing unit is installed in "unfavourable" conditions for detecting the outdoor temperature, another external probe can be combined (optional);
- Possibility to set on each zone if the zone is only hot, hot/cold, only cold (dehumidification included, with dew point calculation);

- The consent for the activation of the system and DHW resistances (both optional) is provided by MAGIS PRO V2 electronics (the power supply is to be taken separately);
- To manage the dehumidifiers, it is necessary to insert in the indoor wall-hung unit a 2 relay board kit (optional), to control 2 dehumidifiers (the third one is controlled by the configurable relay interface kit code 3.015350); the kit allows the dehumidifiers to be activated through a potential-free contact;
- The MAGIS PRO V2 electronics manages the anti-legionella function, which can only be activated if the system is provided with an auxiliary generator (resistance);
- Input to force activation with photovoltaic system that produces electricity;
- It includes a 230 V output to control summer/winter diverter valves in heating systems with fan coil cold/radiant panels; switching occurs with the change of mode (summer/winter) from the control panel;
- Possibility of connection to the System manager (optional), to be used mainly when wanting to combine an integrative boiler:
- The integrated electronics also manage the screed heating function in order to perform the initial central heating cycle on new radiant panel systems;
- The minimum content required for these 12-14-16 kW machines is 50 litres of water for any type of system. Minimum water content is mainly important to provide proper execution of defrosting cycles.

It is available in the model:

• MAGIS PRO 12 V2	code 3.030663
• MAGIS PRO 14 V2	code 3.030664
• MAGIS PRO 16 V2	code 3.030665
• MAGIS PRO 12 V2 T	code 3.030666
• MAGIS PRO 14 V2 T	code 3.030667
• MAGIS PRO 16 V2 T	code 3.030668

EC Declaration Of Conformity.


• Installation template code 2.016868



2

### MAGIS PRO 12 - 14 - 16 V2

### **UE AUDAX PRO V2 DIMENSIONS AND CONNECTIONS (OUTDOOR UNIT)**

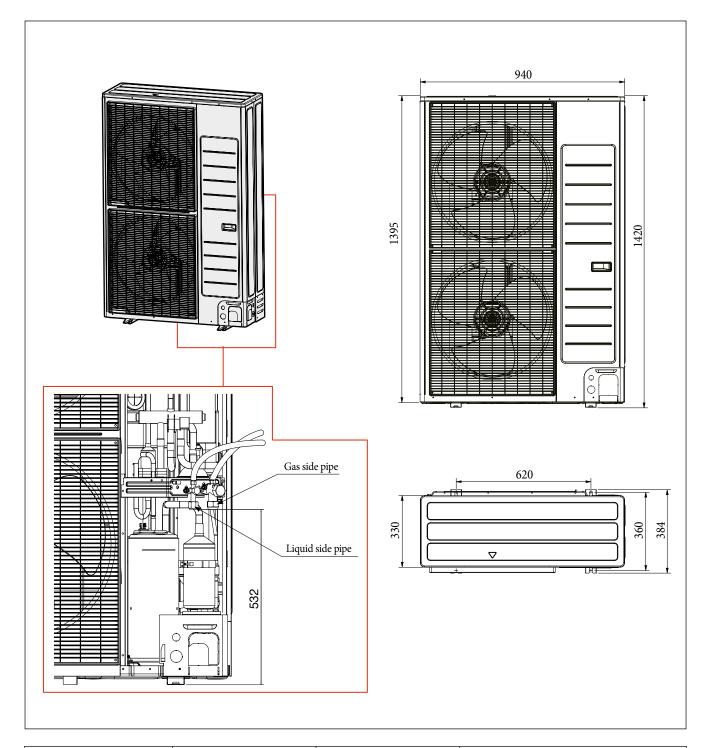


<b>Height</b> = 1420 mm	<b>Width</b> = 940 mm	<b>Depth</b> = 384 mm	Condensate drain = Ø 20 mm

	R410A					
Model	LP (Cooling liquid)	GP (Gaseous liquid)				
UE AUDAX PRO 12-14-16 V2 UE AUDAX PRO 12-14-16 V2 T	3/8" (9.52 mm) 3/8" (9.52 mm)	5/8" (15.88 mm) 5/8" (15.88 mm)				



#### 3 UI MAGIS PRO V2 DIMENSIONS AND CONNECTIONS (INDOOR UNIT)

Height = 780 mm	<b>Width =</b> 440 mm	<b>Depth =</b> 340 mm

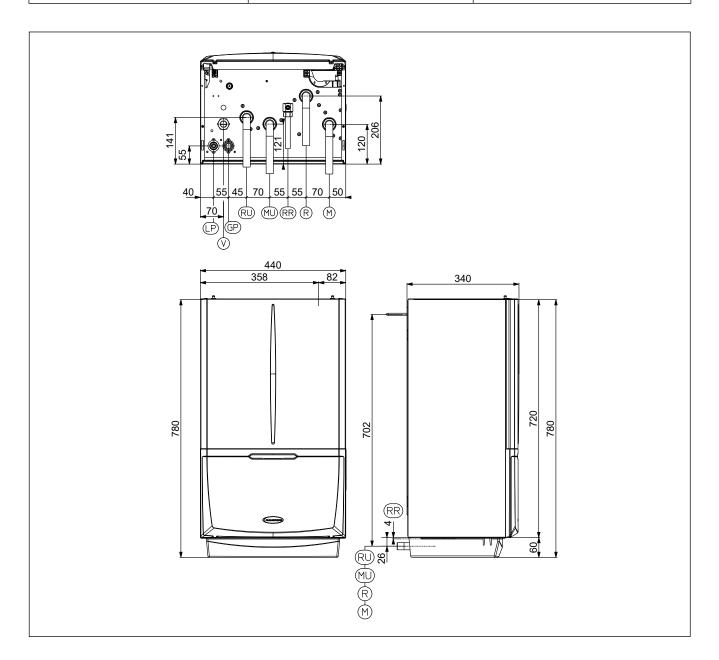

UI MAGIS PRO V2									
Expansion vessel	R410A	R410A	Return	Flow	Filling	Return	Flow		
Litres	LP	GP	Storage tank	Storage tank	system	system	System		
	3/8"	5/8"	RU	MU	RR	R	M		
10 (real 8.3)	(9.52 mm)	(15.88 mm)	1"	1"	1/2"	1"	1"		




4


### MAGIS PRO 12 - 14 - 16 V2
 
#### SINGLE UE AUDAX PRO V2 MINIMUM INSTALLATION DISTANCES


With the back side of the unit facing a wall




 With the front side of the unit facing a wall




With three sides of the unit facing a wall

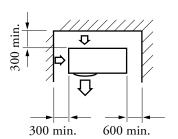


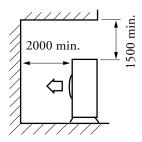

With the top and front sides of the unit facing a wall

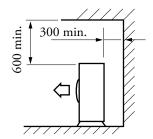

With the top and back sides of the unit facing a wall

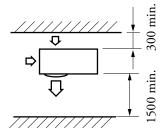

With the front and back sides of the unit facing a wall

#### Place of installation:


The place of installation is very important and must be established by the system's designer or by a specifically qualified person, and must consider the technical requirements, standards and laws in force.

- The condensing unit must be installed outside the building only; the indoor unit must be installed inside the building or outdoors in a partially protected place;
- It is recommended to avoid:
- positioning in basement windows;
- obstacles or barriers that cause recirculation of exhaust air;
- places with aggressive atmospheres;
- limited spaces or anyhow in places where sound levels from the appliance can be enhanced through reverberations or resonance;
- positioning in corners where there is an accumulation of dust, leaves and anything else that can reduce the appliance's efficiency due to blocked passageways;

- prevent exhaust air from the device from coming into the rooms through doors or windows, thus disturbing people;
- The appliances must:
- be placed on a level surface that is able to withstand its weight;
- be placed on a slab that is hard enough and which does not transfer any vibrations to the underlying or adjacent rooms;
- installed by means of the vibration-dampening supports supplied with the machine.
- If the unit is installed in zones subject to heavy snow, it will be necessary to raise the machine by at least the height of the strongest expected snowfall or, alternatively, use wall-support brackets (optional).



#### UE AUDAX PRO V2 MINIMUM INSTALLATION DISTANCES (SEVERAL APPLIANCES)

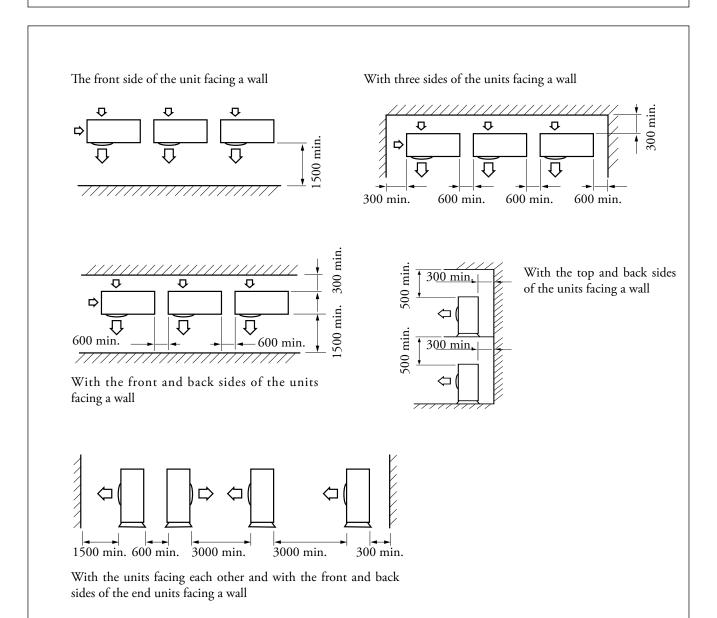

#### In addition:

5

- the unit must be installed in a position protected from snow falling from above. If this is not possible, you must at least prevent the snow from clogging the air/coolant exchanger (even by constructing a small protective roof for the unit, if necessary);
- the effects of the wind can be minimised by installing the unit with the intake side facing a wall;
- the unit must not be installed with the intake side against the wind:
- the effects of the wind can be further minimised by installed a deflector plate facing the unit air flow side (not supplied).


**N.B.:** The spaces shown must be left free to allow air to circulate and to ensure accessibility for repairs or maintenance on every side of the units. In fact, it must be possible to disassemble all the unit components under the utmost safety conditions (both for objects and for people).



6

### MAGIS PRO 12 - 14 - 16 V2

#### INDOOR UNIT HYDRAULIC CIRCUIT COMPONENTS

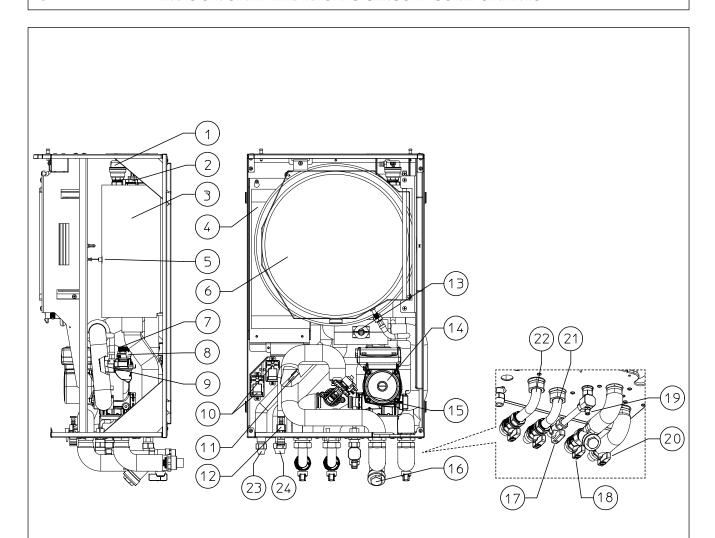

#### KEY:

- 1 Air vent valve
- Heating system integrated electrical resistance cap (optional)
- 3 Central heating manifold
- 4 Plate heat exchanger
- 5 Flow probe
- 6 System expansion vessel
- 7 3 bar safety valve
- 8 Air vent valve
- 9 Return probe
- 10 Relay (optional)
- 11 Liquid phase detection probe


- 12 3-bar safety valve drain fitting
- 13 System flow-meter
- 14 Pump
- 15 3-way valve (motorised)
- 16 Filter that can be inspected
- 17 System filling valve
- 18 System return cock
- 19 System draining cock
- 20 System flow cock
- 21 Storage tank unit flow
- 22 Storage tank unit return
- 23 Chiller line liquid phase
- 24 Chiller line gaseous phase



### **MAGIS PRO 12 - 14 V2**

7

#### GRAPH OF INDOOR UNIT PUMP FLOW RATE/HEAD

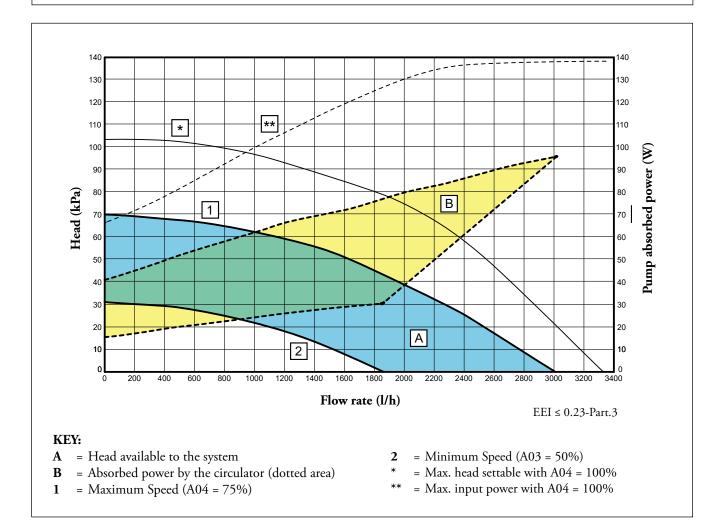

#### 7.1 INDOOR UNIT PUMP SETTINGS AND CONFIGURATIONS

The hydronic modules are supplied with a low power consumption pump with variable speed control.

The pump speed is set via the following parameters: **Fixed** ("A **05" = 0**): the circulator speed is fixed and corresponds to the settings made through the "A 04" parameter (settable between 75% and 100%).

 $\Delta T$  **constant ("A 05" = 5** ÷ **25 K):** the pump speed varies to maintain the  $\Delta T$  (5K) constant between the system flow and return. Also, you can adjust the pump operating range, by setting the maximum speed through the "A 04" parameter and the

minimum speed through the "A 03" parameter.

NOTE: for proper system operation, make sure that the minimum flow rate in operating conditions never drops below 750 l/h.

Treating the feed water allows you to prevent problems and maintain the function and efficiency of the generator over time.

Italian Legislative Decree 26/06/2015 requires a chemical treatment of the thermal system water, in compliance with the UNI 8065 standard, in the cases provided for by the Decree.

#### TECHNICAL NOTE: System minimum water content:


To facilitate proper execution of the heat pump defrost cycles, a minimum water content in the system is required, which must be **50 litres** for all kinds of system. So attention must be paid to the systems divided over several zones, where the water content available to the machine changes continuously. This is why it may be necessary to provide a heating flywheel that guarantees normal operation with systems divided into zones (with variable water content in circulation). This minimum content also guarantees proper operation with fan coils used for cooling (a condition in which the flow temperature is very low and has significant heat load variations that vary the number of active fan coils). It is also important to check that the dehumidifier line has a minimum of **3 llkW** of the machine (dehumidifier hydraulic circuit connection).



7.2

### **MAGIS PRO 16 V2**

#### GRAPH OF INDOOR UNIT PUMP FLOW RATE/HEAD

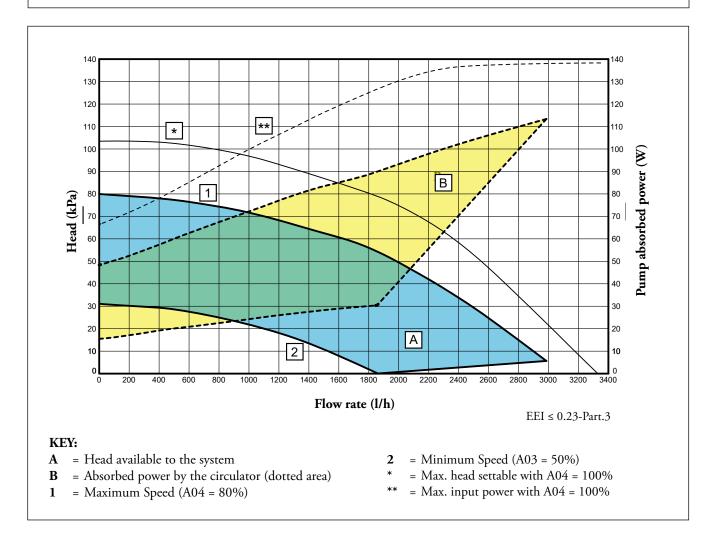

#### 7.3 INDOOR UNIT PUMP SETTINGS AND CONFIGURATIONS

The hydronic modules are supplied with a low power consumption pump with variable speed control.

The pump speed is set via the following parameters: **Fixed** ("A **05" = 0**): the circulator speed is fixed and corresponds to the settings made through the "A **04"** parameter (settable between 80% and 100%).

 $\Delta T$  **constant** ("A 05" = 5 ÷ 25 K): the pump speed varies to maintain the  $\Delta T$  (5K) constant between the system flow and return. Also, you can adjust the pump operating range, by setting the maximum speed through the "A 04" parameter and the

minimum speed through the "A 03" parameter.

NOTE: for proper system operation, make sure that the minimum flow rate in operating conditions never drops below 750 l/h.

Treating the feed water allows you to prevent problems and maintain the function and efficiency of the generator over time.

Italian Legislative Decree 26/06/2015 requires a chemical treatment of the thermal system water, in compliance with the UNI 8065 standard, in the cases provided for by the Decree.


#### TECHNICAL NOTE: System minimum water content:

To facilitate proper execution of the heat pump defrost cycles, a minimum water content in the system is required, which must be **50 litres** for all kinds of system. So attention must be paid to the systems divided over several zones, where the water content available to the machine changes continuously. This is why it may be necessary to provide a heating flywheel that guarantees normal operation with systems divided into zones (with variable water content in circulation). This minimum content also guarantees proper operation with fan coils used for cooling (a condition in which the flow temperature is very low and has significant heat load variations that vary the number of active fan coils). It is also important to check that the dehumidifier line has a minimum of **3 llkW** of the machine (dehumidifier hydraulic circuit connection).



8

#### ELECTRICAL CONNECTIONS IN HIGH VOLTAGE INDOOR UNIT

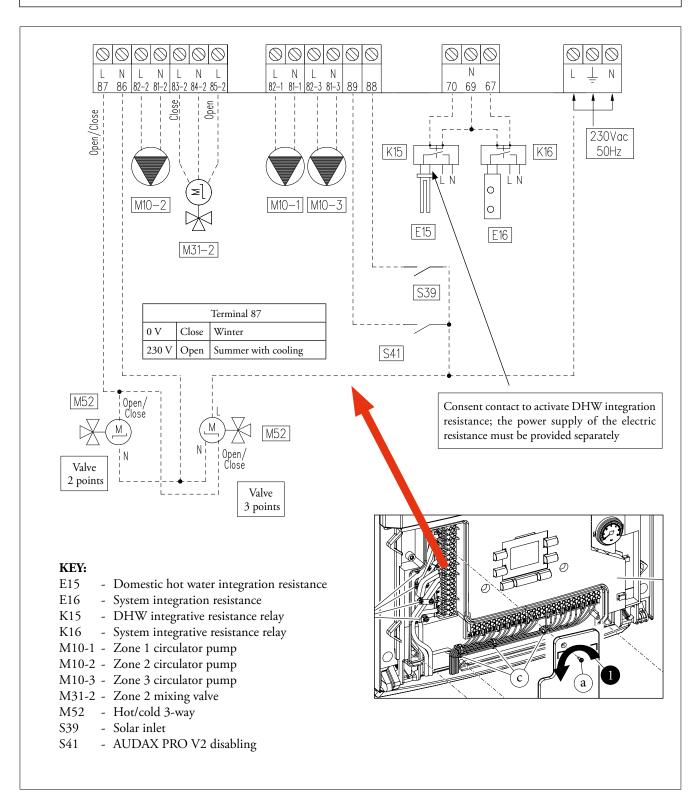


**N.B.:** To control the dehumidifiers, insert the relay board kit (optional) inside the MAGIS PRO V2 hydronic module, for the respective dehumidifiers of the 2 zones. The two relay board kit has only one contact for each zone and, therefore, allows the dehumidifier to work either in neutral air or in cooled air. For further information see the chapter on dehumidifiers.

Through the configurable relay interface kit (optional) it is also

possible to manage a 3rd zone (mixed) on the system, the pump of zone 3 will need to be connected as shown in the diagram (M10-3). The zone 3 dehumidifier, if any, will be managed by means of the configurable relay interface kit, which the zone 3 mixer will also be connected to. In this way 1 direct zone + 2 mixed zones can be controlled.




#### 8.1 ELECTRICAL CONNECTIONS THIRD MIXED OR DIRECT ZONE

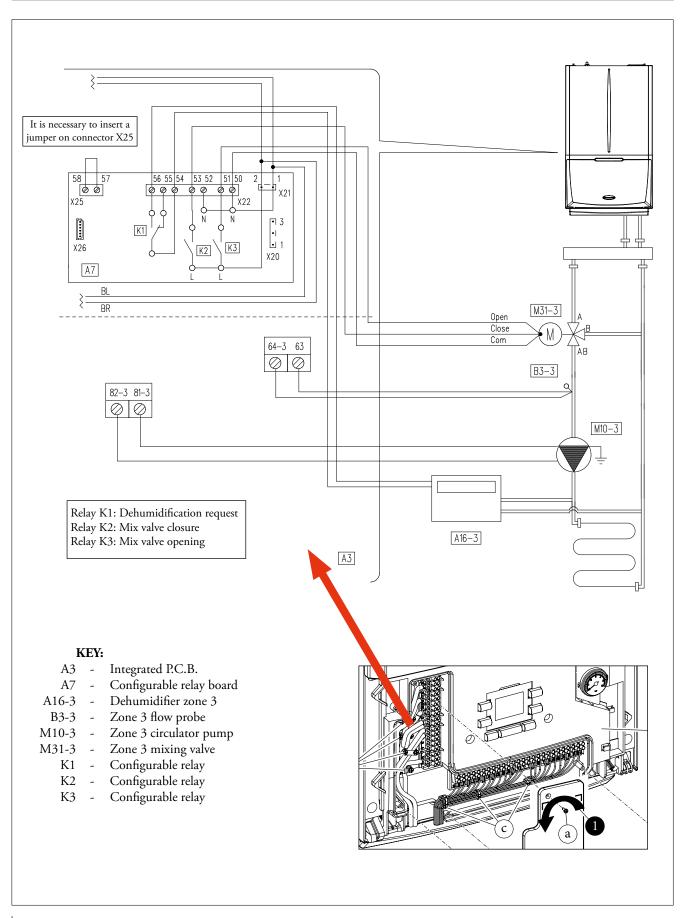



#### 8.2 ELECTRICAL CONNECTIONS IN LOW VOLTAGE INDOOR UNIT

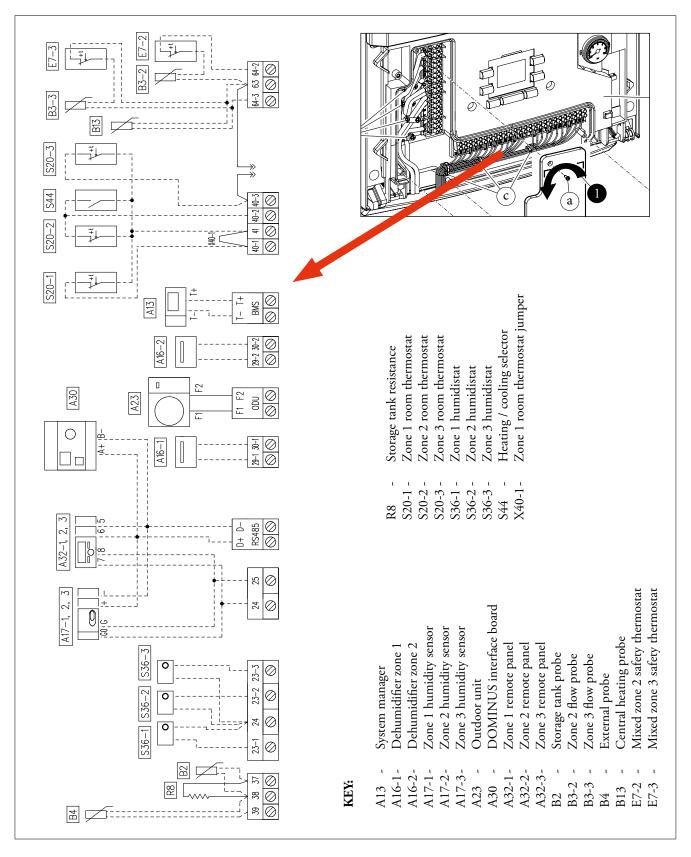

**NOTES**: Eliminate the X40-1 jumper before connecting the S20-1 room thermostat. When the Zone 1 remote panel is connected, hold the X40-1 jumper.

If Zone 2 and 3 remote panel is also connected, make sure there is a jumper between clamps 41 and 40-2 and 40-3.



9

### **MAGIS PRO 12 V2**

### "POWER" AND "ABSORPTION" IN CENTRAL HEATING MODE MAGIS PRO 12 V2

MAGIS PRO	12 V2	Water flow temp	erature °C				
		2	.5	3	60	35	
Air tempe d.b.	erature °C (w.b.)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)
-20	(-21)	9.67	3.19	9.40	3.42	8.95	3.84
-15	(-16)	11.01	3.37	10.71	3.61	10.20	4.06
-10	(-11)	12.70	3.55	12.35	3.81	11.76	4.28
-7	(-8)	12.20	3.40	11.87	3.65	11.30	4.10
-2	(-3)	12.04	3.01	11.71	3.23	11.15	3.63
2	(1)	11.88	2.62	11.55	2.81	11.00	3.16
7	(6)	12.96	2.15	12.60	2.31	12.00	2.59
10	(9)	14.16	2.17	13.76	2.33	13.11	2.61
15	(14)	16.15	2.20	15.70	2.36	14.95	2.65
20	(19)	18.14	2.23	17.64	2.39	16.80	2.69

MAGIS PRO	12 V2	Water flow temp	Water flow temperature °C					
		4	0.	4	15	5	60	
Air tempe d.b.	erature °C (w.b.)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	
-20	(-21)	8.61	4.10	8.26	4.52			
-15	(-16)	9.91	4.31	9.62	4.57	9.33	4.79	
-10	(-11)	11.41	4.51	11.05	4.75	10.72	4.98	
-7	(-8)	11.06	4.63	10.82	5.15	10.38	5.22	
-2	(-3)	10.72	3.98	10.30	4.34	9.78	4.88	
2	(1)	10.39	3.34	9.78	3.52	9.29	3.97	
7	(6)	11.75	2.91	11.50	3.23	11.26	3.53	
10	(9)	12.86	2.94	12.61	3.27	11.98	3.68	
15	(14)	14.71	2.95	14.47	3.35	13.74	3.77	
20	(19)	16.56	3.02	16.32	3.42	15.50	3.85	

MAGIS PRO 12 V2		Water flow temperature °C				
		5	55			
Air tempe d.b.	erature °C (w.b.)	Max. output (kW)	Max. absorbed (kW)			
-20	(-21)					
-15	(-16)					
-10	(-11)	9.95	5.46			
-7	(-8)	9.95	5.30			
-2	(-3)	9.27	5.42			
2	(1)	8.80	4.41			
7	(6)	11.01	3.83			
10	(9)	11.35	4.09			
15	(14)	13.02	4.18			
20	(19)	14.69	4.28			

<sup>-</sup> Correction factor stated DC = 0.9

<sup>-</sup>TOL = -25 °C



### MAGIS PRO 12 V2

## 9.1 "POWER" AND "ABSORPTION" IN COOLING MODE MAGIS PRO 12 V2

MAGIS PRO 12 V2	Water flow temperature °C					
	7	7	10		13	
Air temperature °C d.b.	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)
10	11.95	1.85	12.77	1.86	13.58	1.87
20	10.77	2.33	11.59	2.35	12.40	2.36
30	9.59	2.81	10.41	2.82	11.23	2.84
35	9.00	3.05	9.82	3.06	10.64	3.08
46	7.70	3.58	8.52	3.59	9.34	3.61

MAGIS PRO 12 V2	Water flow temperature °C						
	1	.5	18		25		
Air temperature °C d.b.	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	
10	14.13	1.88	14.95	1.90	16.86	1.93	
20	12.95	2.37	13.77	2.38	15.68	2.42	
30	11.77	2.85	12.59	2.86	14.50	2.89	
35	11.18	3.09	12.00	3.10	13.91	3.13	
46	9.89	3.62	10.70	3.63	12.61	3.66	



### **MAGIS PRO 14 V2**

## 10 "POWER" AND "ABSORPTION" IN CENTRAL HEATING MODE MAGIS PRO 14 V2

MAGIS PRO	14 V2	Water flow temp	Water flow temperature °C					
		2	.5	3	60	3	35	
Air tempe d.b.	erature °C (w.b.)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	
-20	(-21)	10.93	3.69	10.62	3.96	10.12	4.45	
-15	(-16)	12.45	3.90	12.10	4.19	11.52	4.70	
-10	(-11)	14.29	4.11	13.89	4.40	13.23	4.95	
-7	(-8)	13.50	3.82	13.13	4.09	12.50	4.60	
-2	(-3)	13.28	3.39	12.92	3.63	12.30	4.08	
2	(1)	13.07	2.95	12.71	3.17	12.10	3.56	
7	(6)	15.12	2.61	14.70	2.80	14.00	3.15	
10	(9)	16.52	2.64	16.06	2.83	15.29	3.18	
15	(14)	18.84	2.68	18.32	2.87	17.45	3.22	
20	(19)	21.17	2.71	20.58	2.91	19.60	3.27	

MAGIS PRO	14 V2	Water flow temp	Water flow temperature °C					
		4	0.	4	15	5	60	
Air tempe d.b.	erature °C (w.b.)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	
-20	(-21)	9.73	4.75	9.34	5.24			
-15	(-16)	11.20	5.00	10.87	5.29	10.55	5.55	
-10	(-11)	12.83	5.22	12.44	5.50	12.06	5.77	
-7	(-8)	12.23	5.19	11.97	5.78	11.49	5.86	
-2	(-3)	11.83	4.48	11.36	4.88	10.79	5.49	
2	(1)	11.43	3.77	10.76	3.97	10.22	4.47	
7	(6)	13.50	3.45	13.00	3.75	12.72	4.10	
10	(9)	14.84	3.51	14.39	3.84	13.67	4.33	
15	(14)	17.08	3.56	16.72	4.00	15.88	4.50	
20	(19)	19.32	3.68	19.04	4.16	18.09	4.68	

MAGIS PRO 14 V2		Water flow temperature °C				
		5	55			
Air tempo	erature °C (w.b.)	Max. output (kW)	Max. absorbed (kW)			
-20	(-21)					
-15	(-16)					
-10	(-11)	11.19	6.32			
-7	(-8)	11.01	5.94			
-2	(-3)	10.23	6.10			
2	(1)	9.68	4.96			
7	(6)	12.45	4.44			
10	(9)	12.95	4.81			
15	(14)	15.05	5.00			
20	(19)	17.14	5.20			

<sup>-</sup> Correction factor stated DC = 0.9

<sup>-</sup>TOL = -25 °C



### MAGIS PRO 14 V2

## 10.1 "POWER" AND "ABSORPTION" IN COOLING MODE MAGIS PRO 14 V2

MAGIS PRO 14 V2	Water flow temp	Water flow temperature °C				
	7		10		13	
Air temperature °C d.b.	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)
10	14.09	2.39	15.04	2.40	15.99	2.42
20	12.65	2.93	13.61	2.95	14.56	2.96
30	11.22	3.48	12.17	3.49	13.13	3.51
35	10.50	3.75	11.45	3.76	12.41	3.78
46	8.92	4.35	9.88	4.36	10.83	4.38

MAGIS PRO 14 V2	Water flow temp	Water flow temperature °C					
	1	15		18		25	
Air temperature °C d.b.	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	
10	16.63	2.43	17.59	2.44	19.81	2.47	
20	15.20	2.97	16.15	2.98	18.38	3.02	
30	13.76	3.51	14.72	3.53	16.94	3.56	
35	13.05	3.79	14.00	3.80	16.23	3.83	
46	11.47	4.38	12.42	4.40	14.65	4.43	



### **MAGIS PRO 16 V2**

### 11 "POWER" AND "ABSORPTION" IN CENTRAL HEATING MODE MAGIS PRO 16 V2

MAGIS PRO	16 V2	Water flow temp	Water flow temperature °C				
		2	25	3	60	3	55
Air tempe d.b.	erature °C (w.b.)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)
-20	(-21)	12.58	4.43	12.33	4.75	11.65	5.34
-15	(-16)	14.33	4.68	13.93	5.02	13.27	5.64
-10	(-11)	16.51	4.96	16.05	5.32	15.29	5.98
-7	(-8)	14.90	4.52	14.49	4.85	13.80 *	5.45 *
-2	(-3)	14.85	4.00	14.44	4.29	13.75	4.83
2	(1)	14.80	3.49	14.39	3.74	13.70	4.20
7	(6)	17.28	3.12	16.80	3.35	16.00	3.76
10	(9)	18.88	3.15	18.35	3.38	17.48	3.79
15	(14)	21.53	3.19	20.94	3.42	19.94	3.85
20	(19)	24.19	3.24	23.52	3.47	22.40	3.90

MAGIS PRO	16 V2	Water flow temp	Water flow temperature °C					
		4	40	4	15	5	50	
Air tempe d.b.	erature °C (w.b.)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	
-20	(-21)	11.20	5.69	10.75	6.28			
-15	(-16)	12.89	6.00	12.52	6.35	12.14	6.67	
-10	(-11)	14.83	6.29	14.37	6.60	13.94	6.93	
-7	(-8)	13.51	6.15	13.21	6.85	12.68	6.95	
-2	(-3)	13.22	5.30	12.70	5.77	12.06	6.49	
2	(1)	12.94	4.44	12.18	4.68	11.57	5.27	
7	(6)	15.65	4.15	15.30	4.54	14.95	4.93	
10	(9)	17.13	4.22	16.79	4.64	15.95	5.22	
15	(14)	19.61	4.26	19.28	4.80	18.31	5.40	
20	(19)	22.08	4.39	21.76	4.97	20.67	5.59	

MAGIS PRO 16 V2		Water flow temperature °C				
		5	55			
Air temp d.b.	erature °C (w.b.)	Max. output (kW)	Max. absorbed (kW)			
-20	(-21)					
-15	(-16)					
-10	(-11)	12.93	7.59			
-7	(-8)	12.15	7.04			
-2	(-3)	11.43	7.21			
2	(1)	10.96	5.86			
7	(6)	14.60	5.32			
10	(9)	15.11	5.80			
15	(14)	17.35	6.00			
20	(19)	19.58	6.21			

<sup>-</sup> Correction factor stated DC = 0.9

Temp. Water (M/R) - air (db/wb) = 35/30 - 7/6

Temp. Room =  $-7^{\circ}$ C is:

<sup>-</sup>TOL = -25 °C

<sup>(\*)</sup> The working points shown in the table refer to peak values. The nominal working point in the condition:

<sup>-</sup> Max. output = 12.50

<sup>-</sup> **Max. absorbed = 4.60** 

<sup>-</sup>COP = 2.72



### MAGIS PRO 16 V2

## 11.1 "POWER" AND "ABSORPTION" IN COOLING MODE MAGIS PRO 16V2

MAGIS PRO 16 V2	Water flow temp	Water flow temperature °C					
	7	7		10		13	
Air temperature °C d.b.	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	
10	14.74	2.73	15.77	2.77	16.81	2.81	
20	13.20	3.24	14.36	3.28	15.39	3.32	
30	11.91	3.75	12.94	3.79	13.98	3.82	
35	11.20	4.00	12.24	4.04	13.27	4.08	
46	9.64	4.56	10.68	4.59	11.72	4.36	

MAGIS PRO 16 V2	Water flow temp	Water flow temperature °C					
	1	15		18		25	
Air temperature °C d.b.	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	Max. output (kW)	Max. absorbed (kW)	
10	17.50	2.84	18.54	2.87	20.96	2.96	
20	16.09	3.34	17.12	3.38	19.54	3.47	
30	14.67	3.85	15.71	3.89	18.13	3.98	
35	13.96	4.10	15.00	4.14	17.42	4.23	
46	12.41	4.66	13.44	4.70	15.86	4.79	



12

### MAGIS PRO 12 - 14 - 16 V2

#### TECHNICAL DATA MAGIS PRO 12 - 14 - 16 V2 (SINGLE-PHASE)

	MAGIS PRO	12 V2	14 V2	16 V2
Central heating circuit				
Power in CH mode with water set at 35 °C (1)	kW	12.00	14.00	16.00
Power in CH mode with water set at 45 °C (2)	kW	11.50	13.00	15.30
Power in CH mode with water set at 55 °C (3)	kW	11.01	12.45	14.60
CH mode COP with water set at 35 °C (1)		4.63	4.44	4.26
CH mode COP with water set at 45 °C (2)		3.56	3.47	3.37
CH mode COP with water set at 55 °C (3)		2.87	2.80	2.74
Flow temperature range	°C	20 - 55	20 - 55	20 - 55
Outdoor temp. limits for Heating mode operation	°C	- 25 / 35	- 25 / 35	- 25 / 35
System integrative resistance absorption (optional)	kW	3 (each kit)	3 (each kit)	3 (each kit)
Maximum system operating pressure	°C	70	70	70
Cooling circuit				
Power in cooling mode with water set at 18 °C (1)	kW	12.00	14.00	15.00
Power in cooling mode with water set at 7 °C (2)	kW	9.00	10.50	11.20
Cooling mode EER with water set at 18 °C (1)		3.87	3.68	3.62
Cooling mode EER with water set at 7 °C (2)		2.90	2.80	2.80
Flow temperature range	°C	5 - 25	5 - 25	5 - 25
Outdoor temp. limits for Cooling mode operation	°C	10 / 46	10 / 46	10 / 46
DHW circuit				
Domestic hot water adjustable temperature	°C	10 - 50	10 - 50	10 - 50
Domestic hot water adjustable temperature with				
DHW (Domestic hot water) integration resistance	°C	10 - 65	10 - 65	10 - 65
General data				
Refrigerant fluid load (R410A)	g	2980	2980	2980
Max. chiller line length with basic pre-charge	m	20	20	20
Quantity of coolant fluid for each additional metre	g/m	50	50	50
Maximum achievable length of the chiller line	m	50	50	50
Max hydraulic system operating	bar	3	3	3
System expansion vessel nominal (real) capacity	litres	10 (8.3)	10 (8.3)	10 (8.3)
Water circuit content	litres	6.5	6.5	6.5
C.H. sound power level	dB(A)	64	64	66
Electric protection rating	IP	X4D	X4D	X4D
Power supply (indoor unit)	V - Hz	230-50	230-50	230-50
Permitted voltage range	V	198-264	198-264	198-264
Maximum absorbed power (indoor unit)	W	150	150	150
Maximum absorbed power (outdoor unit)	W	6160	6930	8190
Maximum absorbed current in normal operation	A	28	30	32
Fuse required	A	35	40	40
Outdoor unit empty weight	kg	100	100	100
Indoor unit empty weight (full)	kg	38.5 (45)	38.5 (45)	38.5 (45)

THE REPORTED DATA REFERS TO THE FOLLOWING CONDITIONS (in compliance with EN 14511):					
ROOM HEATING PHASE (°C) COOLING PHASE (°C)					
Water TEMP. (F/R) (1) - AIR (db/wb)	35/30 - 7/6	18/23 - 35 (bs)			
Water TEMP. (F/R) (2) - AIR (db/wb)	45/40 - 7/6	7/12 - 35 (bs)			
Water TEMP. (F/R) (3) - AIR (db/wb)	55/47 - 7/6				



#### 12.1 TECHNICAL DATA MAGIS PRO 12 - 14 - 16 V2 T (THREE-PHASE)

	MAGIS PRO	12 V2 T	14 V2 T	16 V2 T
Central heating circuit				
Power in CH mode with water set at 35 °C (1)	kW	12.00	14.00	16.00
Power in CH mode with water set at 45 °C (2)	kW	11.50	13.00	15.30
Power in CH mode with water set at 55 °C (3)	kW	11.01	12.45	14.60
CH mode COP with water set at 35 °C (1)		4.63	4.44	4.26
CH mode COP with water set at 45 °C (2)		3.56	3.47	3.37
CH mode COP with water set at 55 °C (3)		2.87	2.80	2.74
Flow temperature range	°C	20 - 55	20 - 55	20 - 55
Outdoor temp. limits for Heating mode operation	°C	- 25 / 35	- 25 / 35	- 25 / 35
System integrative resistance absorption (optional)	kW	3 (each kit)	3 (each kit)	3 (each kit)
Maximum system operating pressure	°C	70	70	70
Cooling circuit				
Power in cooling mode with water set at 18 °C (1)	kW	12.00	14.00	15.00
Power in cooling mode with water set at 7 °C (2)	kW	9.00	10.50	11.20
Cooling mode EER with water set at 18 °C (1)		3.87	3.68	3.62
Cooling mode EER with water set at 7 °C (2)		2.90	2.80	2.80
Flow temperature range	°C	5 - 25	5 - 25	5 - 25
Outdoor temp. limits for Cooling mode operation	°C	10 / 46	10 / 46	10 / 46
DHW circuit				
Domestic hot water adjustable temperature	°C	10 - 50	10 - 50	10 - 50
Domestic hot water adjustable temperature with				
DHW (Domestic hot water) integration resistance	°C	10 - 65	10 - 65	10 - 65
General data				
Refrigerant fluid load (R410A)	g	2980	2980	2980
Max. chiller line length with basic pre-charge	m	20	20	20
Quantity of coolant fluid for each additional metre	g/m	50	50	50
Maximum achievable length of the chiller line	m	50	50	50
Max hydraulic system operating	bar	3	3	3
System expansion vessel nominal capacity (real)	litres	10 (8.3)	10 (8.3)	10 (8.3)
Water circuit content	litres	6.5	6.5	6.5
C.H. sound power level	dB(A)	64	64	66
Electric protection rating	IP	X4D	X4D	X4D
Power supply (indoor unit)	V - Hz	230-50	230-50	230-50
Power supply (outdoor unit)	V - Hz	380-50	380-50	380-50
Permitted voltage range (outdoor unit)	V	342-457	342-457	342-457
Maximum absorbed power (indoor unit)	W	150	150	150
Maximum absorbed power (outdoor unit)	W	6160	6930	8190
Maximum absorbed current in normal operation	A	10	11	12
Fuse required	A	20	20	20
Outdoor unit empty weight	kg	100	100	100
Indoor unit empty weight (full)	kg	38.5 (45)	38.5 (45)	38.5 (45)

THE REPORTED DATA REFERS TO THE FOLLOWING CONDITIONS (in compliance with EN 14511):					
ROOM HEATING PHASE (°C) COOLING PHASE (°C)					
Water TEMP. (F/R) (1) - AIR (db/wb)	35/30 - 7/6	18/23 - 35 (bs)			
Water TEMP. (F/R) (2) - AIR (db/wb)	45/40 - 7/6	7/12 - 35 (bs)			
Water TEMP. (F/R) (3) - AIR (db/wb)	55/47 - 7/6				



13

### MAGIS PRO 12 - 14 - 16 V2

#### KIT 2 ZONES FOR COUPLING MAGIS PRO 12-14-16 V2 (CODE 3.031695)




The 2 zone kit for coupling with MAGIS PRO 12-14-16 V2 is composed of a frame, open hydraulic manifold, low electric consumption solenoid valves, three-way mixing valve, hydraulic fitting and pipes and thermometers for temperature reading. The pumps included in the kit are distinguished for being very elastic, also thanks to the operating curves that can be pre-set. All components are already assembled and ready to operate. All electrical connections are to be taken to the MAGIS PRO V2 P.C.B.

This kit is to be used to control differential temperature systems and/or divided into two distinct zones.

With the acquisition of the outdoor temperature, the MAGIS PRO V2 electronics enables you to select independent flow temperature curves for each of the 2 zones of the system (both with C.H. and cooling).


Inserting these kits into the technological system enhance overall comfort and energy savings.

#### 13.1 DIMENSIONS AND CONNECTIONS

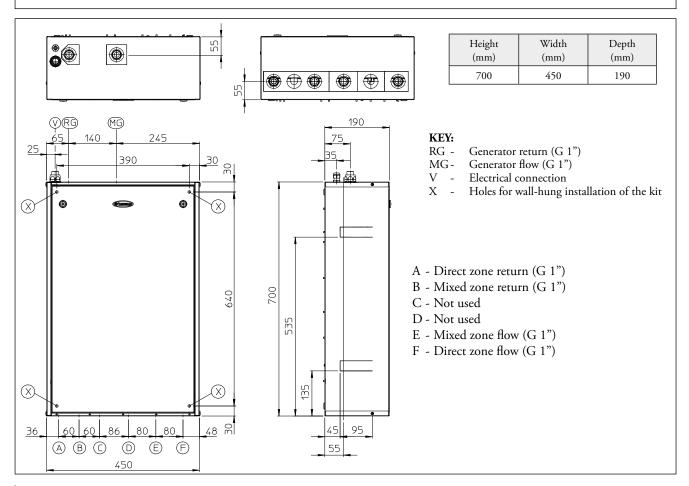



#### 13.2 MAIN COMPONENTS KIT 2 ZONES FOR COUPLING MAGIS PRO V2

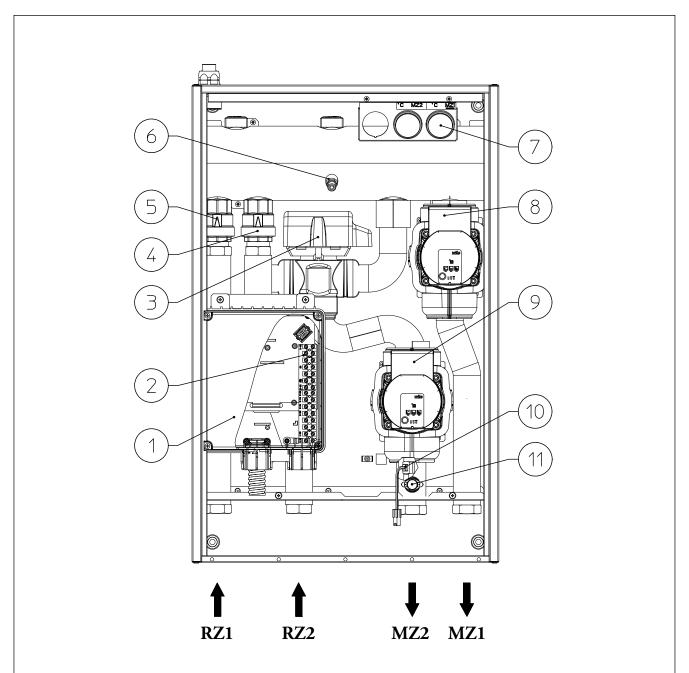

#### KEY:

- 1 Connections box
- 2 Connections terminal board
- 3 Mixing valve
- 4 Mixed zone return circuit "Europa" one-way valve
- 5 Direct zone return circuit "Europa" one-way valve
- 6 Drain fitting
- 7 Flow temperature thermometers
- 8 Direct zone pump
- 9 Mixed zone pump
- 10 Mixed zone flow probe
- 11 Safety thermostat mixed zone




#### 13.3 CHART OF THE HEAD FLOW RATE AVAILABLE TO THE DIRECT ZONE


The kit contains an electronic low consumption circulation pump, whose flow rate/head features are shown in the graph below.

The circulator pumps control the room heating or cooling requests downstream of the hydraulic manifold.

The 2 zone kit is designed for the creation of mixed systems with differentiated temperature (e.g.: one zone with fan coils plus one zone at low temperature with radiant floor panels).

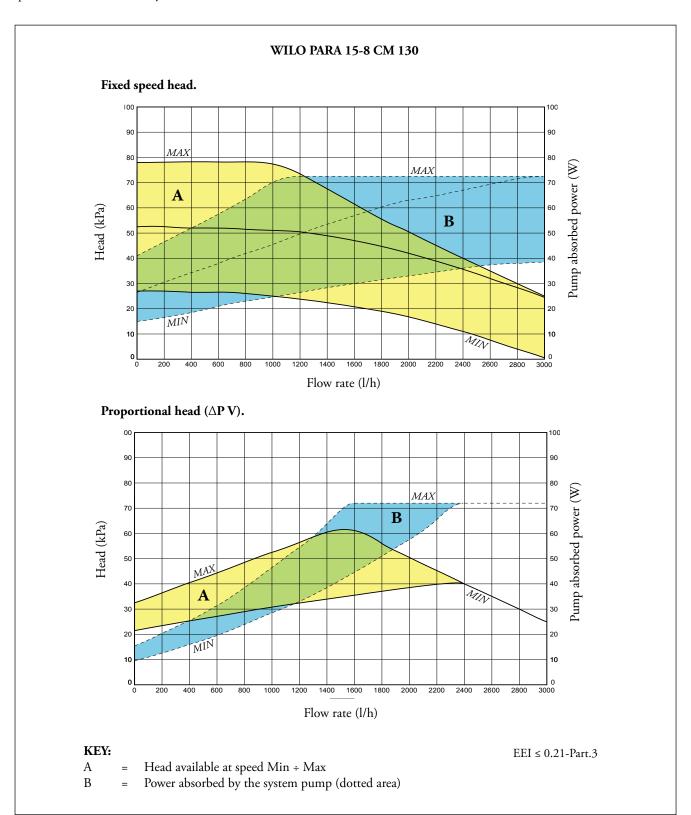



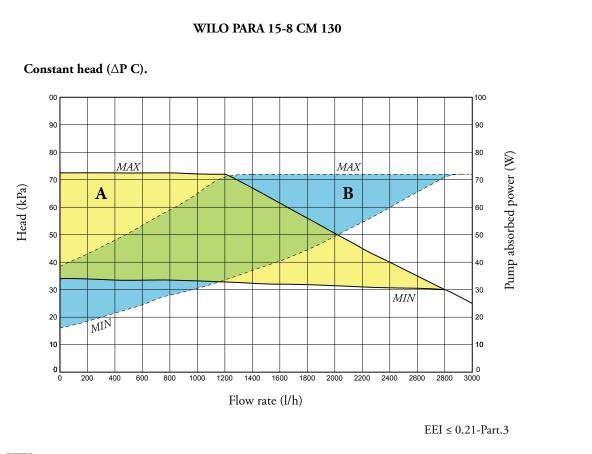

#### KEY:

A Head available at speed Min + Max

Power absorbed by the system pump (dotted area)

#### 13.4 DIRECT ZONE CIRCULATOR PUMP SETTINGS AND CONFIGURATIONS

The circulator pumps control the room heating or cooling requests downstream of the hydraulic manifold.

In fact, the circulator pumps are equipped with electronic control that allows to set advanced functions.

For proper use one must select the most suitable type of operation for the system.

By rotation, it is possible to select the following pump control mode:

Fixed speed I, II, III.

Proportional head I, II, III.

Constant head I, II, III.

### - Fixed speed

Adjusts the pump speed in fixed mode.

It is possible to set 3 different speeds:

I: Minimum Speed.

II: Intermediate speed.

III: Maximum speed (factory set speed).

#### - Proportional head ( $\Delta P$ -V)

This allows the pressure level (head) to be proportionally reduced as the system heat demand decreases (flow rate reduction). Thanks to this function, the electric power consumption of the circulator pump is reduced further: the energy (power) used by the pump decreases according to the pressure level and flow rate. With this setting, the pump guarantees optimal performance in most heating systems, proving particularly suitable in single-pipe and two-pipe installations. Any noise originating from the water flow in the pipes, valves and radiators is eliminated by reducing the head. Optimal conditions for thermal comfort and acoustic well-being.

- Constant head ( $\Delta P$ -C)\_ The circulator pump maintains the pressure level (head) constant as the system heat demand decreases (flow rate reduction). With these settings, the circulator pump is suitable for all floor systems where all the circuits must be balanced for the same drop in head.




#### 13.5 CHART OF THE HEAD FLOW RATE AVAILABLE TO THE MIXED ZONE

The kit contains an electronic low consumption circulation pump, whose flow rate/head features are shown in the graph below.

The circulator pumps control the room heating or cooling requests downstream of the hydraulic manifold.


The 2 zone kit is designed for the creation of mixed systems with differentiated temperature (e.g.: one zone with fan coils plus one zone at low temperature with radiant floor panels).

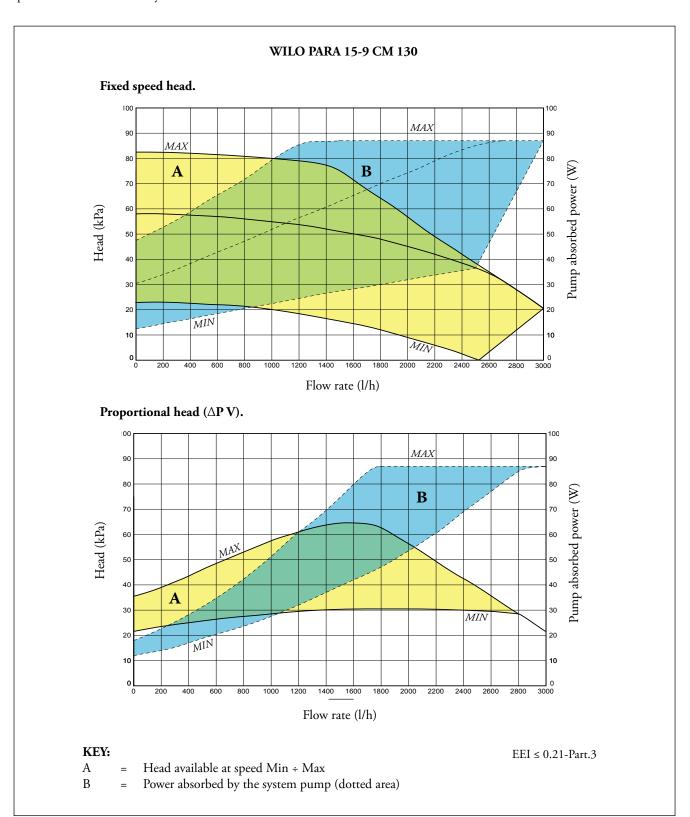





#### Constant head ( $\triangle P$ C).

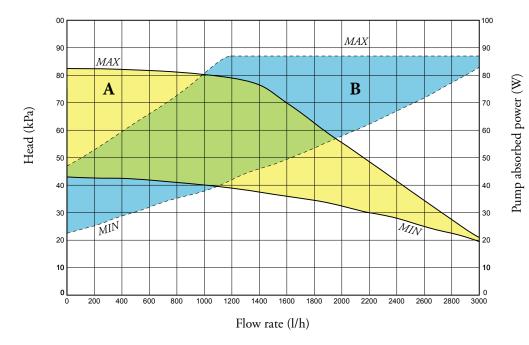

 $EEI \le 0.21$ -Part.3

#### KEY:

A Head available at speed Min + Max

Power absorbed by the system pump (dotted area)

#### MIXED ZONE CIRCULATOR PUMP SETTINGS AND CONFIGURATIONS 13.6

The circulator pumps control the room heating or cooling requests downstream of the hydraulic manifold.

In fact, the circulator pumps are equipped with electronic control that allows to set advanced functions.

For proper use one must select the most suitable type of operation for the system.

By rotation, it is possible to select the following pump control mode:

Fixed speed I, II, III.

Proportional head I, II, III.

Constant head I, II, III.

### - Fixed speed

Adjusts the pump speed in fixed mode. It is possible to set 3 different speeds:

I: Minimum Speed.

II: Intermediate speed.

III: Maximum speed (factory set speed).

#### - Proportional head ( $\Delta P$ -V)

This allows the pressure level (head) to be proportionally reduced as the system heat demand decreases (flow rate reduction). Thanks to this function, the electric power consumption of the circulator pump is reduced further: the energy (power) used by the pump decreases according to the pressure level and flow rate. With this setting, the pump guarantees optimal performance in most heating systems, proving particularly suitable in single-pipe and two-pipe installations. Any noise originating from the water flow in the pipes, valves and radiators is eliminated by reducing the head. Optimal conditions for thermal comfort and acoustic well-being.

- Constant head ( $\Delta P$ -C)\_ The circulator pump maintains the pressure level (head) constant as the system heat demand decreases (flow rate reduction). With these settings, the circulator pump is suitable for all floor systems where all the circuits must be balanced for the same drop in head.



#### 14 INTRODUCTION WITH COMMENTARY TO THE DIAGRAMS: OPERATING PRINCIPLES

# Chap.15: Diagram with MAGIS PRO V2 and 2 zone kit for coupling to MAGIS PRO V2 + Integrative resistance for the heating system+DHW Integrative resistance.

Description of winter functioning:

- CH phase active: The Remote zone panel placed in the room activates consent in the winter phase; in this diagram MAGIS PRO V2 is integrated through the 3 kW electric resistance(s) (optional), to be inserted in the central heating manifold. The logic plans to activate the integrative resistance(s) if I do not reach the temperature set within the maximum waiting time (settable via parameters), or below a certain outdoor temperature (again settable via parameters) I can immediately activate the system electrical resistance.

By setting the specific parameter, the Heat pump and the system integrative resistance(s) can activate simultaneously or alternately with each other.

- **D.H.W. phase**: The MAGIS PRO V2 electronics constantly monitor the DHW temperature set (probe located in the storage tank), activating MAGIS PRO V2.

The logic plans to activate the integrative resistance if I do not reach the setting set within the maximum waiting time (settable via parameters), or below a certain outdoor temperature (again settable via parameters) I can immediately activate the DHW electrical resistance activation.

By setting the specific parameter, the Heat pump and the DHW integrative resistance can activate simultaneously or alternately with each other.

**N.B.:** In case of production from photovoltaic (contact closure "S 39"), the DHW (Domestic hot water) storage tank is heated to a maximum storage temperature exclusively by the heat pump. Any solar system must be managed by a solar control unit, to be purchased separately.

The MAGIS PRO V2 menu contains - among others - the IN-TEGRATION MENU with the following parameters:

INTEGRATION MENU						
Id	Parameter	Range	Default			
I 01	DHW integration enabling	OFF - AL	OFF			
I 02	System integration enabling	OFF - AL - CO	OFF			
I 03	DHW max. wait time	1 - 255 minutes (1 minute steps)	240			
I 04	Central heating max. wait time	1 - 255 minutes (1 minute steps)	120			
I 09	DHW (Domestic hot water) activation temperature	-25 - +35 °C	-15			
I 10	System activation temperature	-25 - +35 °C	-15			

#### PAR. I 01 - DHW (Domestic hot water) integration enabling

- (settable OFF - AL, default value OFF). Using this function, you can enable an alternative (AL) power source, e.g. electrical resistance (if any), to integrate the heating of the domestic hot water.

**N.B.:** With OFF mode only the Heat pump will always be activated, even if the Heat pump blocks, the integrative electrical resistance (if any) will NEVER activate to integrate the domestic hot water.

**PAR. I 02 - System integration enabling** - (settable OFF - AL - CO, default value OFF). Using this function, you can enable the electrical resistance(s) operation (AL) to integrate heating system central heating.

**N.B.:** With OFF mode only the Heat pump will always be activated, even if the Heat pump blocks, the integrative electrical resistance (if any) will NEVER activate for system integration.

**PAR. I 03 - DHW (Domestic hot water) max. wait time** - (settable from 1 - 255 minutes, default value 240 minutes). It establishes the reference time of the activation or deactivation timing of the electrical integration on DHW (Domestic hot water) (if any).

**PAR. I 04 - Central heating max. wait time** - (settable from 1 - 255 minutes, default value 120 minutes). It establishes the reference time of the activation or deactivation timing of the electrical integration on central heating (if any).

**PAR. I 09 - DHW (Domestic hot water) activation temperature** - (settable from -25°C - +35°C, default value -15°C). It establishes the outdoor temperature under which DHW integration is enabled.

**PAR. I 10 - System activation temperature** - (settable from -25°C - +35°C, default value -15°C). It establishes the outdoor temperature under which system integration is enabled.

# Chap.16: Diagram with MAGIS PRO V2 (air conditioning only) + boiler PLUS + solar thermal for DHW + System manager.

Description of winter functioning:


- Central heating mode <u>active</u>: The remote zone panel located in the room activates the winter mode consent, the system Manager, according to the outdoor temperature detected and the room temperature set above the pre-set climatic curve, activates MAGIS PRO V2or the boiler according to the COP calculated (if > the minimum economical convenience value - use of MAGIS PRO V2 is approved), or according to  $T_{\text{minimum}}$  integration (cut off) set in the System Manager.

Remember that also times for making the system operational can vary the boiler insertion mode.

- **Domestic hot water phase:** this system was designed to privilege DHW operation of the boiler only, obviously in addition to the solar thermal system (governed by the System Manager). During the summer cooling phase, the inversion of the MAGIS PRO V2 functioning cycle is also prevented (from chiller to heat pump).




#### 15 HYDRAULIC DIAGRAM: MAGIS PRO V2 + KIT 2 ZONES (1 DIRECT AND 1 MIXED) + INTEGRATIVE RESISTANCE FOR HEATING SYSTEM AND DHW

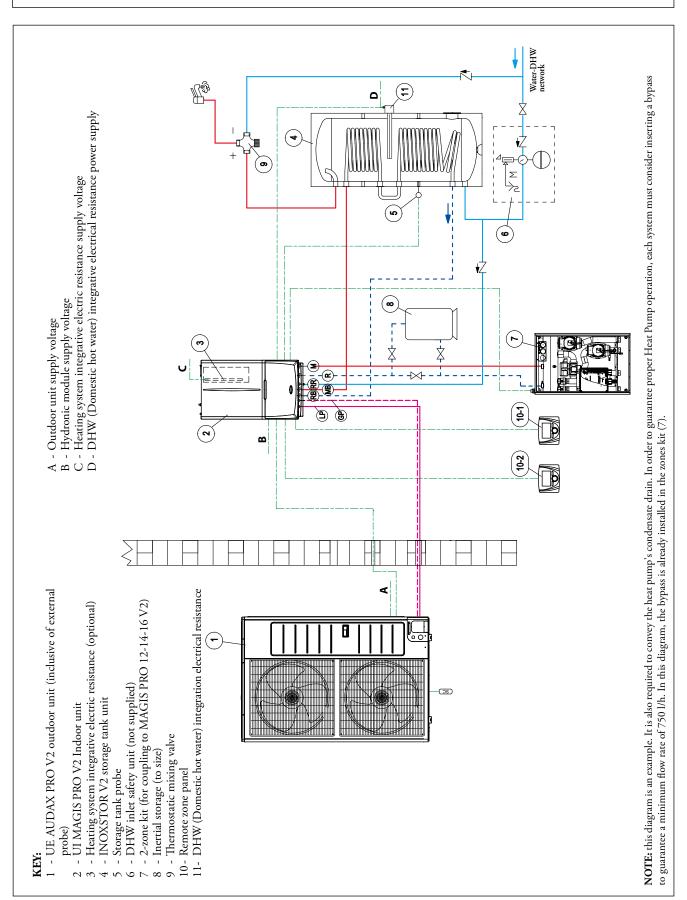



### 16 HYDRAULIC DIAGRAM: MAGIS PRO V2 (AIR CONDITIONING ONLY) + BOILER PLUS + SOLAR THERMAL FOR DHW + SYSTEM MANAGER

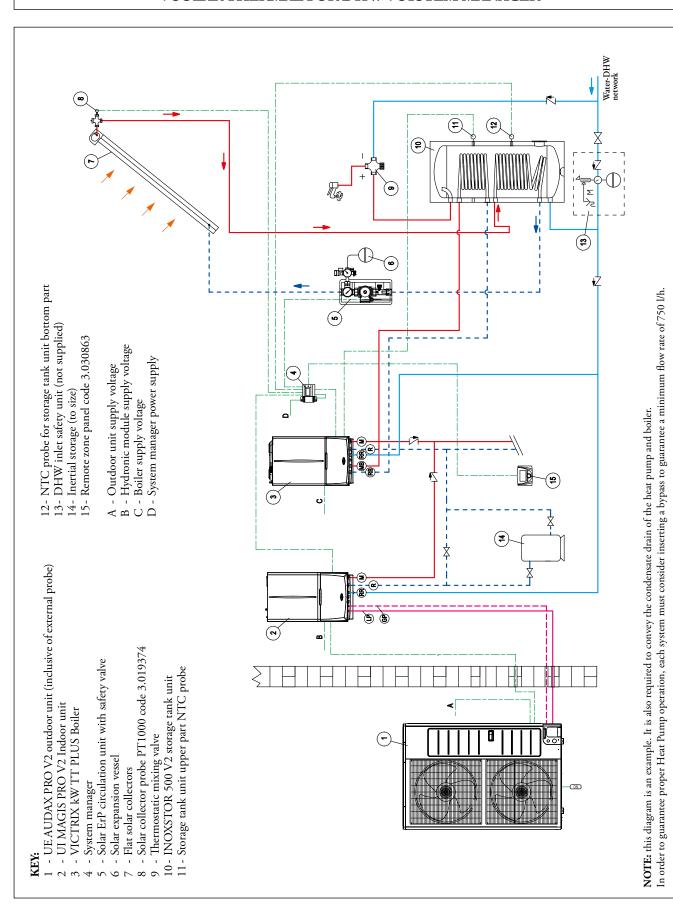



#### 17 OPTIONAL FOR DIRECT COUPLING TO MAGIS PRO V2 (STAND ALONE)

TEMPERATURE CONTROL OPTIONALS	Code	
Zone remote panel - (device class V* or VI)	3.030863	
<b>Temperature and humidity sensor kit ModBus -</b> (device class V or VI*) - to make temperature requests, it is necessary to couple a chrono-thermostat code 3.021622 or 3.021624		
CRONO 7 (Digital weekly chrono-thermostat) - (device class IV* or VII)		
CRONO 7 WIRELESS - (device class IV* or VII)	3.021624	
External probe - if the outdoor unit is installed under unfavourable conditions (device class II* or VI or VII)	3.015266	
Room hygrostat kit - (operates on the dehumidifier according to the humidity detected in the room and according to what is set on the device)		
DOMINUS Interface board kit (for remote control via App)	3.026273	
OTHER OPTIONALS	Code	
2 zone kit (1 direct zone and 1 mixed zone) for MAGIS PRO 12-14-16 V2 coupling (wall-hung or recessed for mixed systems)	3.031695	
Three-way deviator valve kit used as hot/cold system deviator		
3 kW integration electric resistance kit (to be inserted inside the hydronic module, 230 Vac power supply) - up to two can be installed		
Additional 2 kW resistance kit 200-300-500 INOXTOR and OMNISTORE		
Additional 5 kW resistance kit for 1000-1500 litre storage tanks		
Antifreeze protection kit -15 °C (for hydronic module protection)		
Dehumidifier kit - for recessed installation only		
Dehumidifier frame kit		
Dehumidifier grid kit		
2 relay board kit for MAGIS PRO V2 coupling (for dehumidifier control)		
Contact NTC probe kit for storage tank (can also be used to read the temperature of a possible Puffer)		
Configurable relay board kit (to manage 3 <sup>rd</sup> mixed zones and other features)		
Flow temperature probe kit (for managing the temperature of the 3 <sup>rd</sup> mixed zone)		
Low temperature safety kit		
Connection for R410 circuit kit (to allow easy connection of the cooling circuit also in case of pipes that arrive at the rear)		
75 litres Buffer tank (can be installed wall-hung vertically or on floor)	3.027288	
Bracket kit for wall mounting 75 litres Buffer tank (for wall-hung installation)	3.027290	
Wall installation brackets kit for outdoor condensing unit		
HYDRO 3 range Wall-hung hydronic split, HYDRO FS range floor standing hydronic fan coil, HYDRO IN range recessed hydronic fan coil		

<sup>\*</sup>Device class (REF. Communication of the European Commission 2014/C 207/02 ) with factory settings.



### RECESSED SOLUTIONS OR IN TECHNICAL CABINET WITH MAGIS PRO V2

MODEL		domestic hot water	Heating system	For recess	For technical cabinet
MAGIS PRO with SUPER TRIO TOP	See relative technical data sheet	250-Litre storage tank  Possibility to integrate with solar thermal	Up to two system zones (1 direct standard and 1 mixed optional) for operation in both heating mode and cooling mode Integrated 45 litre inertial storage tank in stainless steel	CONTAINER for SUPER TRIO  Solution to be recessed into the wall	DOMUS CONTAINER for SUPER TRIO Visible indoor solution

During the useful life of the products, performance is affected by external factors, e.g. the hardness of the DHW, atmospheric agents, deposits in the system and so on.  The declared data refer to new products that are correctly installed and used in observance of the Standards in force.  N.B.: correct periodic maintenance is highly recommended.
<b>NOTE:</b> Depending on the specific design and installation conditions, the diagrams and drawings provided in this documentation can require further integration or modifications, according to what is set forth by the Standards and technical regulations in force and applicable (as an example, the R stamp - edition 2009 is mentioned). It is the professional's responsibility to identify the applicable provisions, to evaluate compliance with these in each case and the necessity of any changes to diagrams and drawings.



Immergas TOOLBOX
The App designed by Immergas for professionals









To request further specific details, sector Professionals can also use the following e-mail address: consulenza@immergas.com

Immergas S.p.A. 42041 Brescello (RE) - Italy Tel. 0522.689011 Fax 0522.680617



